



New Easy-Ice 12 Cell Sheets

AUTO-HYDRATING & BOTH SIDES GEL-FREE

DIFFERENT USAGE



Preserve cool Cold Drinks in Ice Box



Preserve Sea food in transit



Preserve Medicines cool



Keep Fruits cool



Keeps Ice cream & desserts Cool



400 gm 11x7 Inch

Contact:

mail: info@easyiceindia.com

www.easyiceindia.com

www.facebook.com/easyiceindia

Code : 12c N


INTRODUCTION

1. These sheets are used in Ice box for extended cooling period (like 3 days). Ice box prevents outside heat from reaching the items to be cooled.
2. These 12 cell sheets easily bend in corners. Used with Easy Ice bar sheets in larger straight areas.
3. Carry or store temperature sensitive house hold items, Medical, agricultural & like items.
4. Use for Cold/Hot Therapy. It takes shape as per body part. Like elbow, knee or back

HOW TO USE

1. Easy Ice sheets are paper thin - 30 gm supplied dry. The first step is Hydration

HYDRATION PROCEDURE

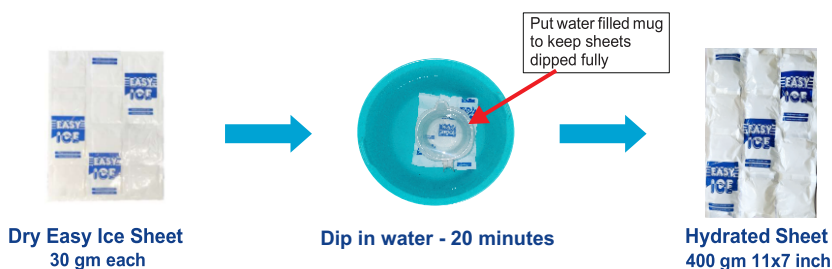

2. When you want to use the Ice-pack take a small tub about 16" dia or kitchen top, fill it with water. Dip the sheets in water. Sheets being light float. To dip them, put one or two water filled mug over the sheets. Let the sheets remain dipped end to end for 20 minutes or more. The sheets absorb water **automatically** and each cell swells about 2 cm thick. This completes hydration.
3. With absorbed water sheets become 350 to 400 gm each.
4. The hydrated sheets form gel in the cells. Hydration is required only once at the beginning.

TO USE COLD

1. Place the hydrated sheets flat in freezer. Freeze at lowest temperature.



Freezer

During freezing One can stack sheets one over other
When not in use, keep sheets in freezer for ready availability in frozen condition.

2. The frozen sheets are now ready for use in Ice box with items to be cooled.
3. The sheets after a few days in Ice box will revert to outside temperature. Freeze and reuse repeatedly. Easy Ice Sheets are flexible & hygienic ice. It has long life. It does not melt & wet like ice. The outer surfaces of the ice-pack are free from slippery gel.

TO USE HOT

4. The hydrated Easy Ice sheets are Ok to heat, to temperature like 75°C. Place the hydrated sheet in microwave oven say for a minute (depends on oven Kilowatt power). The heated sheets can be used to keep food items, milk bottle warm. The hydrated sheet can be dipped in boiled water for say 5 minutes and used as warmer. One can reheat the sheets and use.

Notes:

1. Place frozen sheets above and around items to be kept cool. Seal the ice box with a about 2-inch-wide tape. Open the box only when required and seal again to prevent leakage of cold air.
2. Duration of cooling depend on quality of Ice box, (Ice box of wall thickness more than 2 Inch are better) cooling of items before insertion in Icebox and times box is opened.
3. Keeps fridge cool during power failure. Reduces load on compressor.
4. When using sheets in contact with liquid, fish or meat, place frozen Easy Ice Sheet in a plastic zipper bag to prevent the possible contamination with fluids.